GRANDVIEW

CONSTRUCTION

INTERIOR COLLECTION

Interior style & finish guide

Choose the details that make your home feel complete.



AI-GENERATED STYLE IMAGE

THE FINISHING TOUCH, FROM FLOOR TO CEILING.

Coordinated options for trim, doors, hardware and feature walls.
Clear visuals. Simple selection codes. A look that feels like home.

TRIM / DOORS / HARDWARE / FEATURE WALLS

PAGE INDEX

Find your finishing touches

Explore by category, or begin with one of the coordinated trim packages. Tap a section to jump there.

SECTION	OPTION CODES	PAGES
Coordinated trim packages	P1-P4	3
Baseboard profiles	A1-A6	4-6
Door & window casing	B1-B5	7-9
Shoe, layouts & crown	S / C / D / CR	10-13
Interior door styles	DR1-DR9	14-16
Knobs, levers & hardware finishes	HW / HF	17-18
Feature walls & paneling	W1-W6	19-21
Size, material & finish	F1-F5	22

The AI-generated images show style. Confirm profiles, dimensions and colors with physical samples.

HOW TO USE THIS GUIDE

Choose your favorite option codes and share them with Grandview. We will confirm the actual products, measurements, finish and scope in your project proposal.

FOUR EASY STARTING POINTS

Find your favorite look

Choose a package, then adjust the size, shoe molding and finish. You can also mix individual options.



P1

Everyday Classic

A familiar finish

A1 + B1
C1 + D1

S1 standard shoe

3 1/4" base | 2 1/4" casing



P2

Tall Classic

A fuller traditional look

A3 + B4
C1 + D2

S1 standard shoe

5 1/4" base | 3 1/4" casing



P3

Clean Modern

Simple lines, wider trim

A4 + B3
C1 + D1

S0 no shoe or S3 square shoe

Upgrade: B5 accent casing

5 1/2" base | 3 1/2" casing



P4

Craftsman

Straight trim with presence

A5 + B3
C2 + D3

S3 square shoe

5 1/2" base | 3 1/2" casing

Package images show the overall look. Refer to the codes for the selected profiles and layouts.

A BASE | B CASING | S SHOE | C / D DOOR / WINDOW LAYOUT

Add optional crown CR1-CR3. Grandview confirms the final sample and project price.

BASEBOARDS

Everyday favorites

Compare the side profile with a close-up of the trim in place.

A1 Everyday Colonial

EVERYDAY

SIDE PROFILE

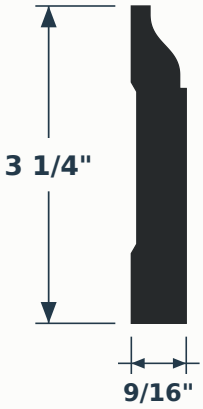

INSTALLED LOOK



Example: 3 1/4" high x 9/16" thick

Pairs with B1

A familiar curved top with a clean, broad face. A straightforward choice for a whole-home refresh.

A2 Rounded Ranch

EVERYDAY

SIDE PROFILE

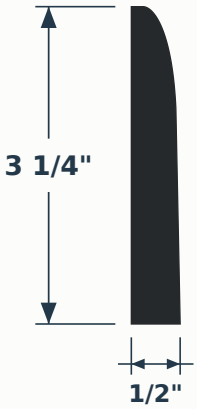

INSTALLED LOOK



Example: 3 1/4" high x 1/2" thick

Pairs with B2

A soft, rounded shape that works especially well when coordinating with existing Ranch trim.

Side profiles and dimensions are examples. Confirm the final profile and size by sample.

BASEBOARDS

A little more presence

Compare the side profile with a close-up of the trim in place.

A3 Tall Colonial

UPGRADE

SIDE PROFILE



INSTALLED LOOK



Example: 5 1/4" high x 9/16" thick

Pairs with B1 or B4

A broad, flat face and a simple curved top give the room a fuller, finished look.

A4 Flat Modern

UPGRADE

SIDE PROFILE



INSTALLED LOOK



Example: 5 1/2" high x 1/2" thick

Pairs with B3

A broad, flat face with a softened top edge. Choose a mitered frame for a clean, contemporary look.

Side profiles and dimensions are examples. Confirm the final profile and size by sample.

BASEBOARDS

Simple architectural detail

Compare the side profile with a close-up of the trim in place.

A5 Stepped Craftsman

UPGRADE

SIDE PROFILE

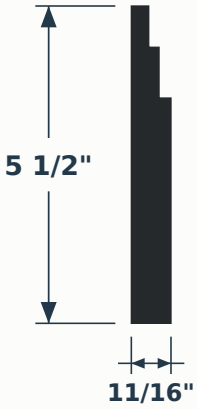

INSTALLED LOOK



Example: 5 1/2" high x 11/16" thick

Pairs with B3

Simple steps add definition to a flat profile. Pair with straight casing and a square header.

A6 Beveled Edge

UPGRADE

SIDE PROFILE



INSTALLED LOOK



Example: 5 1/4" high x 1/2" thick

Pairs with B3

One angled top edge adds a little detail while keeping the overall look simple and tailored.

Side profiles and dimensions are examples. Confirm the final profile and size by sample.

DOOR AND WINDOW CASING

Familiar casing profiles

Compare the side profile with a close-up of the trim in place.

B1 Colonial WM 356

EVERYDAY

SIDE PROFILE

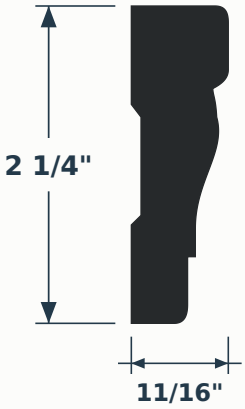

INSTALLED LOOK



Example: 2 1/4" wide x 11/16" thick

Pairs with A1 or A3

The familiar WM 356 profile has a broad curved face and simple edges for doors and windows.

B2 Rounded Ranch

EVERYDAY

SIDE PROFILE

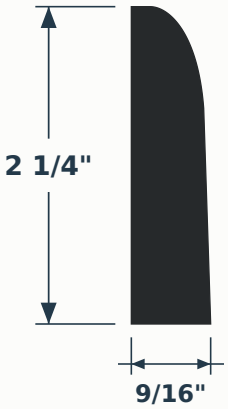

INSTALLED LOOK



Example: 2 1/4" wide x 9/16" thick

Pairs with A2

A smooth, rounded frame for an understated finish or a coordinated match to Ranch baseboard.

Side profiles and dimensions are examples. Confirm the final profile and size by sample.

DOOR AND WINDOW CASING

Wider, more defined frames

Compare the side profile with a close-up of the trim in place.

B3 Flat Casing

UPGRADE

SIDE PROFILE

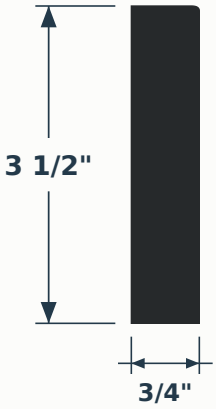

INSTALLED LOOK



Example: 3 1/2" wide x 3/4" thick

Pairs with A4, A5 or A6

Use mitered corners for a modern frame, or a wider square header for a Craftsman look.

B4 Wide Colonial

UPGRADE

SIDE PROFILE

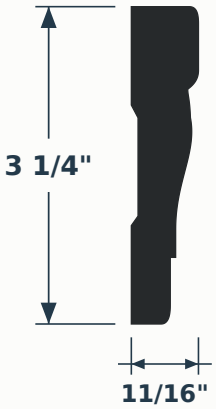

INSTALLED LOOK



Example: 3 1/4" wide x 11/16" thick

Pairs with A3

A wider traditional casing gives larger openings more presence. Pair with taller Colonial baseboard.

Side profiles and dimensions are examples. Confirm the final profile and size by sample.

DOOR AND WINDOW CASING

Flat casing with accent

A clean, flat face with a narrow raised outside edge. A subtle detail that gives the opening more definition.

B5 A simple, tailored upgrade

SIDE PROFILE

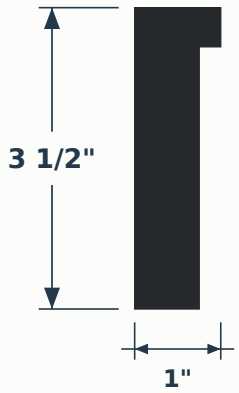

INSTALLED LOOK



Example: 3 1/2" overall width x 1" overall depth

A raised outside edge frames the flat casing. The detail may be a one-piece profile or an applied accent, depending on the selected product.

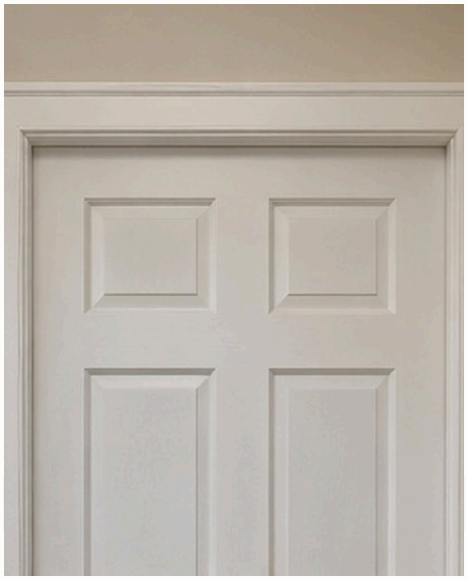

THE ACCENT UP CLOSE



A fine raised edge runs around the outside of the frame.

PAIR IT WITH

A4 Flat Modern base
C1 mitered door layout
D1 picture-frame window

Add B5 to the Clean Modern package, or use it as an individual selection. Sizes are examples; confirm the exact profile and accent proportions by sample.

SHOE MOLDING

Choose the floor detail

A small detail makes a visible difference. Choose one shoe profile, or a clean floor line with S0.

S1 Standard base shoe



3/4" high x 1/2" projection

Slender rounded shape. Pairs naturally with Colonial and Ranch trim.

S2 Quarter round

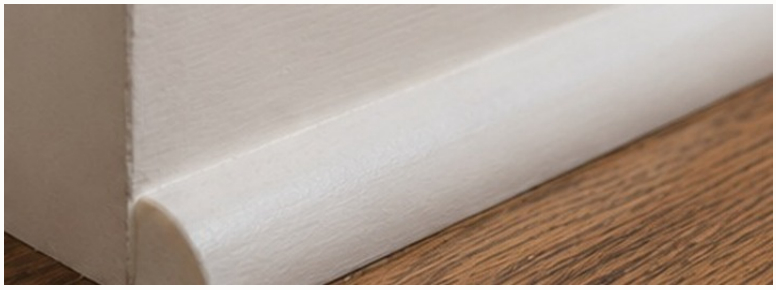

3/4" high x 3/4" projection

A fuller curve that projects farther from the baseboard.

S3 Square shoe



3/4" high x 1/2" projection

A straight-edged finish for Modern or Craftsman trim.

S0 No shoe

A clean base-to-floor line where the flooring gap and site conditions allow.

DOOR LAYOUTS

Two ways to frame a door

Compare the two door frames and look closely at where the pieces meet.

C1 Mitered frame



C2 Craftsman header

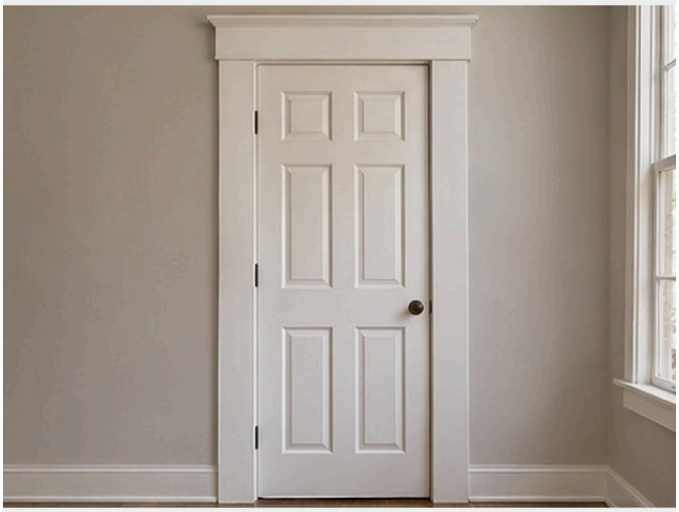

CORNERS UP CLOSE



Matching casing meets at a clean 45° corner. Works with Colonial, Ranch or flat casing.



Flat side pieces meet a wider square head. Best paired with B3 flat casing.

Choose the corner style first. Grandview will size the casing and header to suit the door, nearby walls and existing trim.

WINDOW LAYOUTS

Finish your windows

Coordinate with your door trim, or add a stool and apron for a more traditional window detail.

D1

Picture frame



Casing wraps all four sides with mitered corners. Clean and simple.

D2

Stool and apron



A projecting interior stool with an apron below adds a classic finish.

D3

Craftsman window



A square header, flat sides, stool and apron create a tailored frame.

DETAILS THAT MAKE THE DIFFERENCE

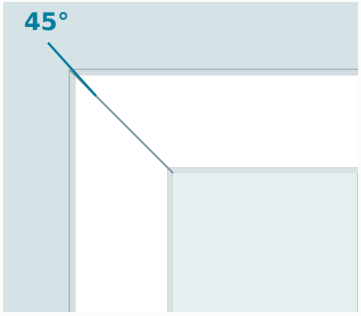

D1 / Mitered corner
The frame follows the window on all four sides.

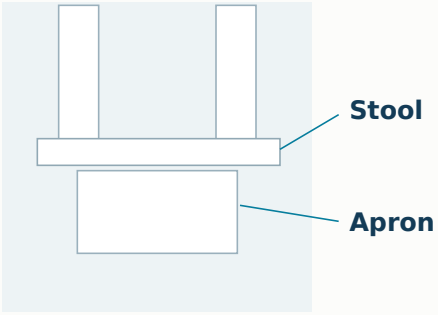

OPTIONAL CROWN MOLDING

Finish the room with crown

Carry your trim style up to the ceiling. Choose a simple profile or add a little more definition.

CR1 Simple Cove

Pairs with P1 or P3

SIDE PROFILE



INSTALLED CORNER

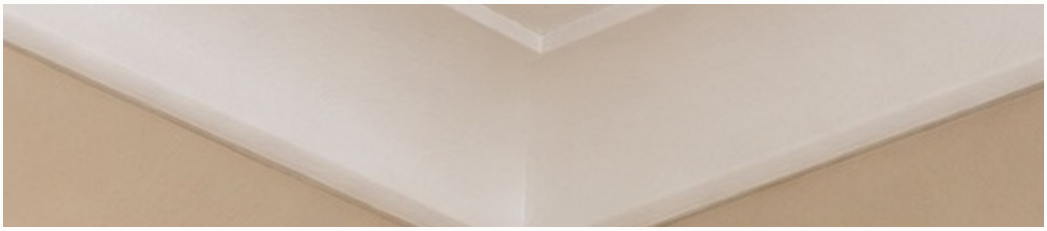

A gentle curved face gives the ceiling a soft, understated finish.

CR2 Classic Colonial

Pairs with P1 or P2

SIDE PROFILE

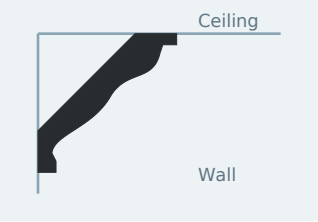

INSTALLED CORNER



Familiar curves and fine edge details coordinate with traditional trim.

CR3 Clean Craftsman

Pairs with P3 or P4

SIDE PROFILE

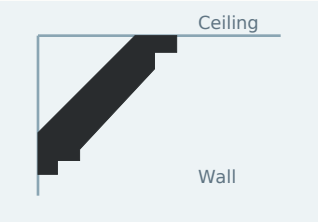

INSTALLED CORNER



Flat planes and simple steps complement Modern and Craftsman packages.

Final size and profile are confirmed by sample. Crown is quoted as an optional upgrade.

INTERIOR DOOR STYLES

Classic & Mission doors

Compare the panel layout first. Then coordinate the casing, hardware and finish.

DR1

Six-panel



A familiar raised-panel design with a traditional feel.

TRIM PAIRING

B1 or B4 Colonial

DR2

Single-panel Mission



One broad recessed panel keeps the look clean and simple.

TRIM PAIRING

B3 flat or B5 accent

DR3

Two-panel Mission



A taller upper panel and smaller lower panel create balanced detail.

TRIM PAIRING

B3 flat or B5 accent

Mission / Shaker designs shown. Panel proportions and available construction vary by manufacturer. Hardware and casing are selected separately.

INTERIOR DOOR STYLES

More clean-lined choices

Compare the panel layout first. Then coordinate the casing, hardware and finish.

DR4

Three-panel horizontal



Three stacked panels add rhythm while keeping straight, simple lines.

TRIM PAIRING

B3 flat or B5 accent

DR5

Five-panel Mission



A horizontal five-panel layout adds a little more character.

TRIM PAIRING

B3 flat or B5 accent

DR6

Three-panel Mission



One wide upper panel above two tall lower panels creates a classic Mission look.

TRIM PAIRING

B3 flat or B5 accent

Confirm the actual door size, construction and installation requirements for each opening.

INTERIOR DOOR STYLES

Bring light between rooms

Compare the panel layout first. Then coordinate the casing, hardware and finish.

DR7

Full-lite clear glass



An open view between rooms. A natural option for an office or den.

TRIM PAIRING

B3 flat or B5 accent

DR8

Full-lite frosted glass



Softens the view through the glass while allowing light through.

TRIM PAIRING

B3 flat or B5 accent

DR9

Divided-lite glass



A traditional grid gives glass doors more structure and detail.

TRIM PAIRING

B1 Colonial or B3 flat

Glass clarity and privacy vary with lighting and glass type. Confirm with a physical sample.

DOOR HARDWARE

Knobs or levers?

Choose the shape you like, then select its finish and function on the next page.

KNOBS



HW1

Classic round knob



HW2

Oval knob



HW3

Modern knob

LEVERS



HW4

Straight lever



HW5

Curved lever



HW6

Rounded lever

Shapes are shown in satin nickel. Grandview will confirm the final model and matching hardware.

HARDWARE FINISH & FUNCTION

Finish the hardware set

Coordinate knobs or levers with hinges and door stops for a consistent look.



HF1

Matte black



HF2

Satin nickel



HF3

Polished chrome



HF4

Satin brass



HF5

Bronze

Finish names and tones vary by manufacturer. Compare actual samples when matching existing hardware or mixing metals.

Choose the function by room

Passage	Latches without a privacy lock. Hallways and closets
Privacy	Locks for everyday room privacy. Bedrooms and bathrooms
Dummy / inactive	A fixed pull with no operating latch. Selected closets or inactive doors

COMPLETE THE LOOK

Knob or lever + finish + function + coordinating hinges and stops

Hardware function reference: Schlage

FEATURE WALLS & PANELING

Classic wall details

Choose a pattern, then tailor the height, spacing and finish to your room.

W1 Picture-frame molding



Slim molding creates a classic framed pattern on a focal wall, in a dining room or along a hallway.

Pairs with Colonial trim or B5 accent casing.

W2 Board-and-batten wainscot



A lower paneled section adds definition and leaves the upper wall open for paint or artwork.

Pairs with flat or Craftsman trim.

Final layout, material, dimensions and paint or stain are confirmed for your room.

FEATURE WALLS & PANELING

Clean lines & warm texture

Choose a pattern, then tailor the height, spacing and finish to your room.

W3 Full-height grid panels



A regular grid creates a bold feature using simple straight lines. Panel spacing is tailored to the wall.

Pairs with Modern or Craftsman packages.

W4 Vertical wood slats



Narrow vertical slats add texture and warmth. Choose a wood tone and spacing that suit the room.

Pairs with flat trim and simple hardware.

Final layout, material, dimensions and paint or stain are confirmed for your room.

FEATURE WALLS & PANELING

Relaxed paneling styles

Choose a pattern, then tailor the height, spacing and finish to your room.

W5 Horizontal shiplap



Horizontal boards give the room a relaxed look. Choose white, a soft neutral or a feature color.

Pairs with Ranch, flat or Craftsman trim.

W6 Beadboard wainscot



Fine vertical grooves and a top cap create a cottage-style lower wall finish.

Pairs with Colonial or simple flat trim.

Final layout, material, dimensions and paint or stain are confirmed for your room.

SIZE, MATERIAL AND FINISH

Make it yours

Start with the style. Then choose the proportions and finish that feel right in your home.

A little taller makes a difference.



3 1/4" / Everyday



5 1/4" / Taller



5 1/2" / Broad and flat

Use the stated heights to compare sizes. Grandview will balance the baseboard height with the casing width, door size and available wall space.

Choose your material

Paint-grade MDF	A smooth painted finish in suitable dry rooms.
Paint-grade wood	Primed finger-jointed pine or solid wood, finished in your color.
Stain-grade wood	Visible wood grain, with a species and stain sample you approve.

Choose your finish



F1 Crisp white



F2 Creamy
Sherwin-Williams
SW 7012



F3 Wall color



F4 Dark contrast



F5 Stained wood

Finish images show the general look. Confirm color and sheen with a physical sample.
For damp locations, ask about suitable PVC or rated trim. Final selections are included in your proposal.